



POIGNÉE DE REBORD EDGE PULL HANDLE 1531

www.sga.ca

1 Percer 2 trous de 7/16" (11mm) de diamètre à 3/4" (19 mm) de profondeur, le #1 à 36" (91.4 cm) du bas de la porte et le #2 à 1-15/16" (49 mm) en dessous. Entre eux, percer d'autres trous.

2 Appuyer la poignée le plus haut possible, placer la poignée, marquer le contour avec un couteau coupant et retirer la poignée.

3 Ciseler la zone grise à 3/4" (19 mm) de profondeur et ciseler les bouts de la poignée à 3/32" (2.4 mm) de profondeur.

4 Poser la poignée dans son trou. Une fois bien placée, fixer la poignée avec les vis.


1 Drill 7/16" (11 mm) holes, 3/4" (19 mm) deep. On center line, drill hole #1, 36" (91.4cm) from door bottom and #2 1-15/16" (19 mm) under. Drill overlapping 3/4" holes between them.

2 Place pull top's uppermost and drop pull into slot. Mark around edge of face-plate with a sharp knife and remove pull from opening.

3 Use a sharp chisel to recess 3/4" (19 mm) deep in the grey area the recess 3/32" (2.4 mm) deep on top and on pull bottom.

4 Fit pull into position and fasten to door with screws.

UTILISER LE GABARIT
USE TEMPLATE

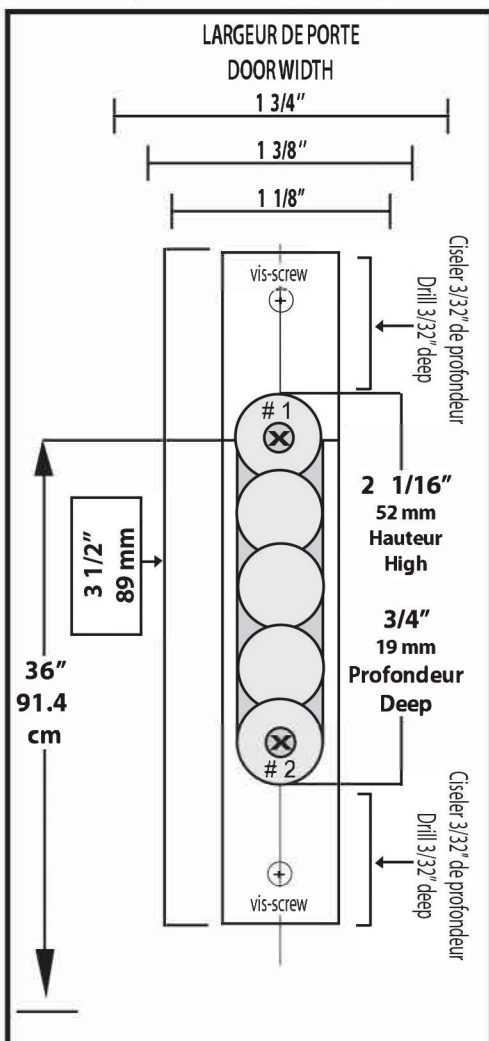

Concept SGA inc. Terrebonne (Québec) Canada Tel: 450.477.0526 / 1.800.363.7801

Fax: 450.477.0186 / 1.888.494.1137 www.sga.ca/info@sga.ca